

## Remo (Wiring)

### interface:

1: signal interface: (microphone socket)

Red-----→E+ (positive source) / Yellow or Blue-----→S+ (positive signal)

Black-----→E- (negative source) / White or Green-----→S- (negative signal)

No sign -----→GND

2: recharge battery socket:

AC/DC 9V-----external positive, inner negative

3: RS232 interface: DB9

## Remo R

### interface:

1: signal interface: (microphone socket)

Red-----→E+ (positive source) / Yellow or Blue-----→S+ (positive signal)

Black-----→E- (negative source) / White or Green-----→S- (negative signal)

No sign -----→GND

2: recharge battery socket:

AC/DC 10V-----external positive, inner negative

3: RS232 interface: DB9